

Production of lotion bags for easy application

Handling and processing of highly-sensitive foil.



A completely new type of cosmetic product, with which the packaging and applications are functionally associated with one another, requires an individual concept for the technical solution.

Based on the basic machine for the bag production of the BRT series, systems have been used that enable foam pads to be integrated into the bag. The bag is fabricated inline and transferred onto a turntable.

On this a previously die-cut pad is welded, filled with lotion and sealed.


U.S. Patent No. 6,007,264

Technical data

Output up to 240 products / minute



Overall view of the bag manufacturing unit

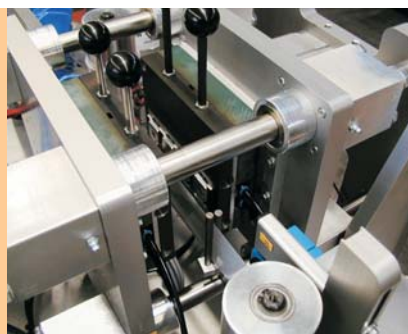

Contour sealing of the bags



Die-cutting of the outer contour